

Assembly Instructions: 7041-LP (Monroe)

IMPORTANT:

- ALL INSTALLATION WORK SHOULD BE DONE BY ACCREDITED PROFESSIONAL.
- SHUT OFF POWER SUPPLY AT FUSE OR CIRCUIT BREAKER!
- USE ONLY THE SPECIFIED BULBS. DO NOT EXCEED THE MAXIMUM WATTAGE!

For Customer Service, please contact the place of purchase.

PREPARING FOR INSTALLATION

Remove all of the contents from the carton. See the important notes above. Shut off the power at the circuit breaker and completely remove the old fixture from the ceiling, including the old mounting strap.

1. Take the mounting strap assembly from the parts bag. One end of nipple (F) should be attached to mounting strap (A) with washer and hex nut (C and D) in place.
2. Adjust nipple (F) within mounting strap (A). Place canopy (G) up to the mounting strap and thread nut (I) onto nipple (F) under the canopy. Check for gaps that would prevent the canopy from sitting flush against the ceiling when installed. Remove and adjust the height of nipple (F) until the desired height is reached. Then remove nut (I) and canopy (G). Place aside for future use.
3. Use mounting screws (B) and a screw driver to attach mounting strap (A) to the junction box.
4. One of connector rods (N) has the fixture's wires inside. Hook connector rods (N) to the frame at loops (Q) and then pull the fixture wires until taut. Attach the top of connector rods (N) to canopy (S) at loops (R). Top loop (L) is on the fixture wires, but not attached to the body of the fixture. Pass the fixture wires through top loop (L). Pull the wires until taut and thread top loop (L) onto the fixture body.

5. By measuring, determine the correct number of chain links needed for proper hanging height. If necessary, use a pair of pliers to open and remove any excess chain. Attach one chain connector (K) to each end of chains (J). Use one of chain connectors (K) to attach chains (J) to top loops (L) and close each chain connector. Feed the fixture's wires up through one side of the chain (every three links or so), pulling the wires until taut. Use the free chain connectors (K) to attach chain (J) to canopy loops (H).


CONNECTING THE WIRES

6. Have an assistant support the fixture weight while completing the wiring. Cut away excess wire. Attach the fixture's wires to the power supply wires from the junction box. Connect black to black (or smooth); white to white (or ribbed); ground to ground (green or copper). Twist the ends of the wire pairs together, then twist on a wire connector. Make sure all twists are in the same direction. If there is no ground wire (green or copper) from the junction box, locate ground screw (E) on mounting strap (B) and wrap the fixture's ground wire around the green ground screw (E). Use a screwdriver to secure ground screw (E) onto the mounting bracket. Tuck all wires neatly into the junction box.

FINISHING THE INSTALLATION

7. Raise canopy (G) up to the ceiling and tightly thread nut (I) onto nipple (F) to secure canopy (G) in place.
8. Slide glass shades (P) over sockets (M) and secure in place with socket covers (O).
9. Install light bulbs (not provided) in accordance with the fixture's specifications. Do not exceed the maximum recommended wattage.

Your installation is complete. Turn on the power and test the fixture.

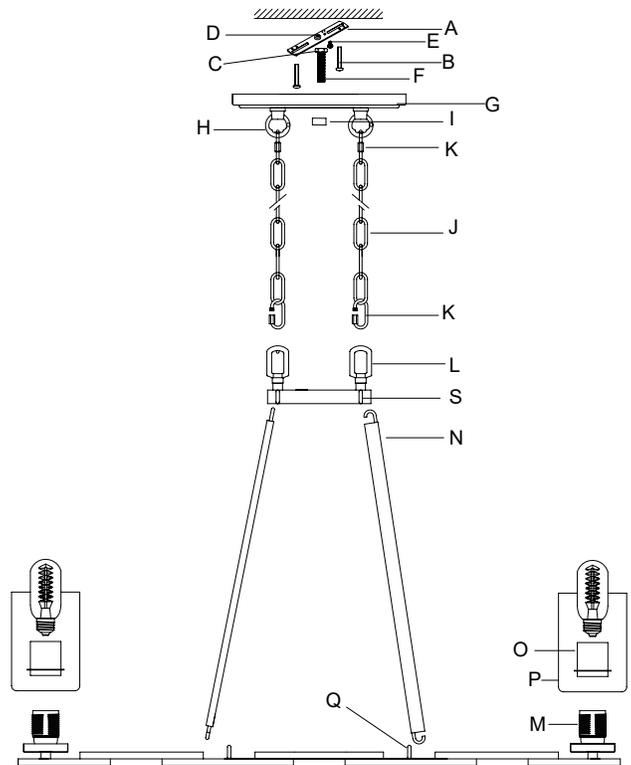

How to Identify the Fixture's Wires			House Wires	
Hot	Neutral	Ground	Hot	Neutral
Smooth	Ribbed	Bare Metal, Green, or Green Inner Thread	Hot	Neutral
Black	White	Black Inner Thread	Neutral	Ground
Black Inner Thread	White Inner Thread		Ground	

CLEANING TIPS

Treat the fixture gently! Regular cleaning will reduce the need for deep cleaning. For regular cleaning, turn off the light and wipe down the fixture with a clean lint-free cotton or microfiber cloth. Never spray cleaner directly onto the fixture.