

# Assembly Instructions: 8330-M1L

**BURN RISK!** Please turn off power to the fixture before adjusting the angle of the rings to avoid burns from the exposed bulbs.

## IMPORTANT:

- ALL INSTALLATION WORK SHOULD BE DONE BY ACCREDITED PROFESSIONAL.
- SHUT OFF POWER SUPPLY AT FUSE OR CIRCUIT BREAKER!
- USE ONLY THE SPECIFIED BULBS. DO NOT EXCEED THE MAXIMUM WATTAGE!


**For Customer Service, please contact the place of purchase.**

## PREPARING FOR INSTALLATION

Remove all of the contents from the carton. See the important notes above. Shut off the power at the circuit breaker and completely remove the old fixture from the ceiling, including the old mounting strap.

1. Mounting strap (A) contains several pairs of threaded holes. Find the pair of holes that matches the spacing of the holes on the junction box and your fixture's canopy. Test canopy (G) on mounting strap (A) to ensure that the backplate will hang straight and enough of the threads of mounting screws (B) will be exposed for deco nuts (F) to fit. Place the fixture aside. Pull the house wires through the center of mounting strap (A).

2. Place mounting strap (A) over the junction box so that mounting screws (D) may be inserted. Secure mounting strap (A) to the junction box with mounting screws (D) and a screwdriver. Tighten the screws securely. Pull house wires through the center of the strap.

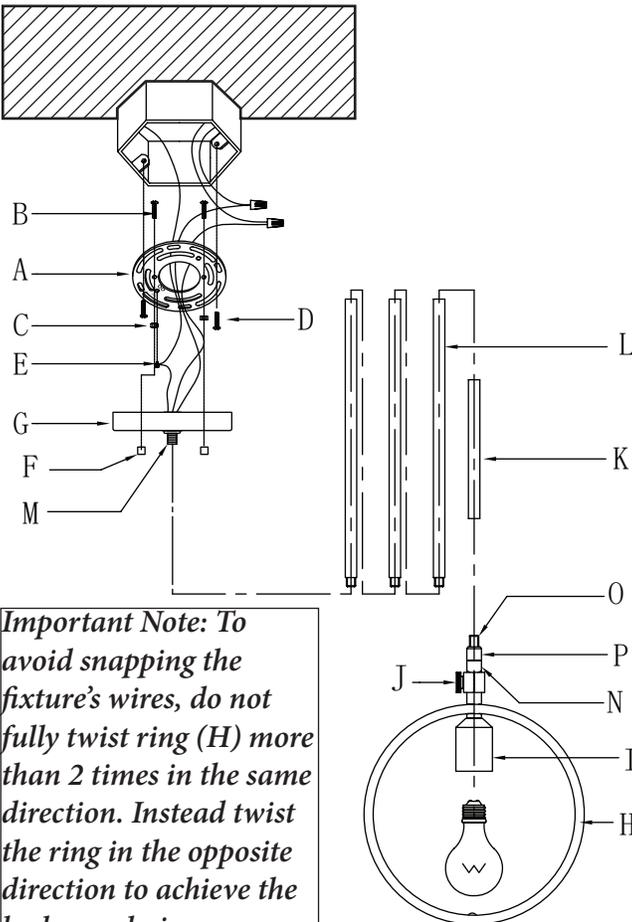

**Important Note:** To avoid snapping the fixture's wires, do not fully twist ring (H) more than 2 times in the same direction. Instead twist the ring in the opposite direction to achieve the look you desire.

3. Rods (L and K) are on the fixture's wires, but not connected to the fixture. Measure to determine the correct number of rods needed for proper hanging height. To shorten the fixture, slide any excess rods off the fixture's wires to discard. To lengthen the fixture, add additional rods. If additional rods are needed, contact the place of purchase to order.


4. Screw rods (L) onto bottom rod (K) to secure. Trim the wires after adding at least 8 to 10 inches of wire to the desired length. Screw the connected rods onto post (O). Twist the top or the rods (L) onto post (M) on the bottom of canopy (G). Pull until taut.

## CONNECTING THE WIRES

5. Attach the fixture's wires to the house wires pulled through the center of the mounting strap earlier. Connect black to black (transparent wire with black inner thread or smooth); white to white (transparent wire with white inner thread or ribbed); ground to ground (transparent wire with green inner thread, green wire, or copper). Twist the ends of the wire pairs together, then twist on a wire connector. Make sure all twists are in the same direction. If there is no ground wire (transparent wire with green inner thread, green, or copper) from the junction box, locate ground screw (E) on mounting strap (A) and wrap the fixture's ground wire around the green ground screw (E). Use a screwdriver to secure ground screw (E) onto the mounting bracket. Tuck all wires neatly into the junction box.

### How to Identify the Fixture's Wires

Hot	Neutral	Ground
Smooth	Ribbed	Bare Metal, Green, or Green Inner Thread
Black	White	
Black Inner Thread	White Inner Thread	

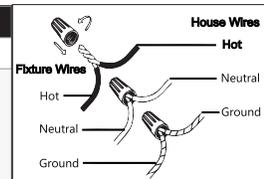

## FINISHING THE INSTALLATION

6. Place the fixture's canopy (G) over mounting strap (A) so that the holes in mounting strap (A) line up with the holes in canopy (G).

7. Thread deco nuts (F) onto the exposed threads of mounting screws (B) until canopy (G) is snug against the ceiling.

8. Install a light bulb (not provided) into socket (I) based on the fixture's specifications. Do not exceed the maximum wattage.

**Note:** You can adjust the position of the light source/ring using thumb screw (J). Twist ring (H) to change the look/configuration. See the Burn Risk and Important notes above.

Your installation is complete. Turn on the power and test the fixture.

## CLEANING TIPS

Treat the fixture gently! Regular cleaning will reduce the need for deep cleaning. For regular cleaning, turn off the light and wipe down the fixture with a clean lint-free cotton or microfiber cloth. Never spray cleaner directly onto the fixture.