

Assembly Instructions: 1374-4P/6P (Ariana)

IMPORTANT:

- ALL INSTALLATION WORK SHOULD BE DONE BY ACCREDITED PROFESSIONAL.
- SHUT OFF POWER SUPPLY AT FUSE OR CIRCUIT BREAKER!
- USE ONLY THE SPECIFIED BULBS. DO NOT EXCEED THE MAXIMUM WATTAGE!

For Customer Service, please contact the place of purchase.

PREPARING FOR INSTALLATION

Remove all of the contents from the carton. See the important notes above. Shut off the power at the circuit breaker and completely remove the old fixture from the ceiling, including the old mounting strap.

1. Take the mounting strap assembly from the parts bag. Mounting strap (B) contains several threaded holes. Two sets of mounting screws (A & D) should be attached to mounting strap (B). You may need to tighten nuts (C) that hold mounting screws (A) in place. If the screws are not attached, please hold canopy (F) up to mounting strap (B). Line up the holes in canopy (F) with the holes in mounting strap (B) and insert mounting screws (A) into mounting strap (B) so that mounting screws (A) protrude through the holes in canopy (F). Mounting screws (A) are long, so please test the canopy against the mounting strap to see how far you should insert the screws. Tighten nuts (C) onto mounting screws (A) to hold the screws in place.

ASSEMBLING THE FIXTURE


2. Rods (L) are on the fixture's wires, but not connected to the fixture. Connect rod (I) to the fixture body at nipple (K) with washer (J). Measure to determine the correct number of rods needed for proper hanging height. There are three optional 12 inch rods (L) and one 6 inch rod (I) included. To lengthen the fixture, add additional rods. If additional rods are needed, contact the place of purchase to order. To shorten the fixture, trim the wires to the desired length adding at least 8 to 10 inches of to the desired length. Slide any excess rods off the fixture's wires to discard.

3. Thread the wires through the rods and pull the wires until taut before threading the rods together. Thread rods onto one another and then twist the top rod (L) onto the threads of swivel post (H) of canopy (F). Lock the rod in place by twisting swivel post (H). Pull the fixture's wires through the top of canopy (F).

CONNECTING THE WIRES

4. Have an assistant support the weight of the fixture while completing the wiring. Cut away excess wire. Attach the fixture's wires to the house wires from the junction box. Connect black to black (or smooth); white to white (or ribbed); ground to ground (green or copper). Twist the ends of the wire pairs together, and then twist on a wire connector. Make sure all twists are in the same direction. If there is no ground wire (green or copper) coming from the junction box, locate ground screw (E) on mounting strap (B) and wrap the fixture's ground wire around the green ground screw (E). Use a screwdriver to secure ground screw (E) onto the mounting bracket. Tuck all wires neatly into the junction box.

How to Identify the Fixture's Wires		
Hot	Neutral	Ground
Smooth	Ribbed	Bare Metal, Green, or Green Inner Thread
Black	White	
Black Inner Thread	White Inner Thread	


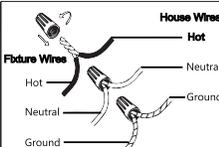


FINISHING THE INSTALLATION

5. Place rod (N) onto nipple (Q) and attach the rod (N) to the top of the fixture at joint (M).
6. Place crystal wafer (P) into metal trough (O) and secure using the small iron sheet tabs.
7. Refer to the diagram to see how to install the crystal wafers.
8. Push canopy (F) up to the ceiling and thread nuts (G) onto the exposed threads of mounting screws (A).

Install light bulbs (not included) in accordance with the fixture's specifications into sockets (R). Do not exceed maximum recommended wattage.

Your installation is now complete. Turn on the power and test the fixture.

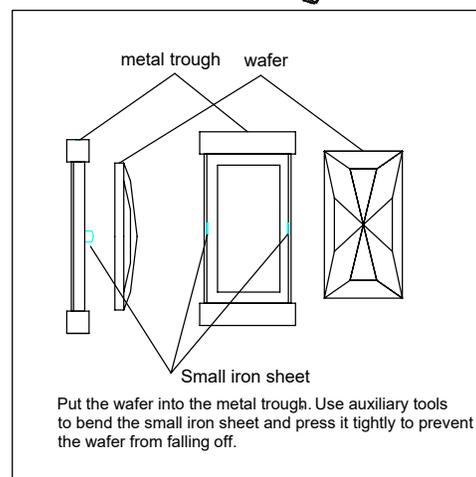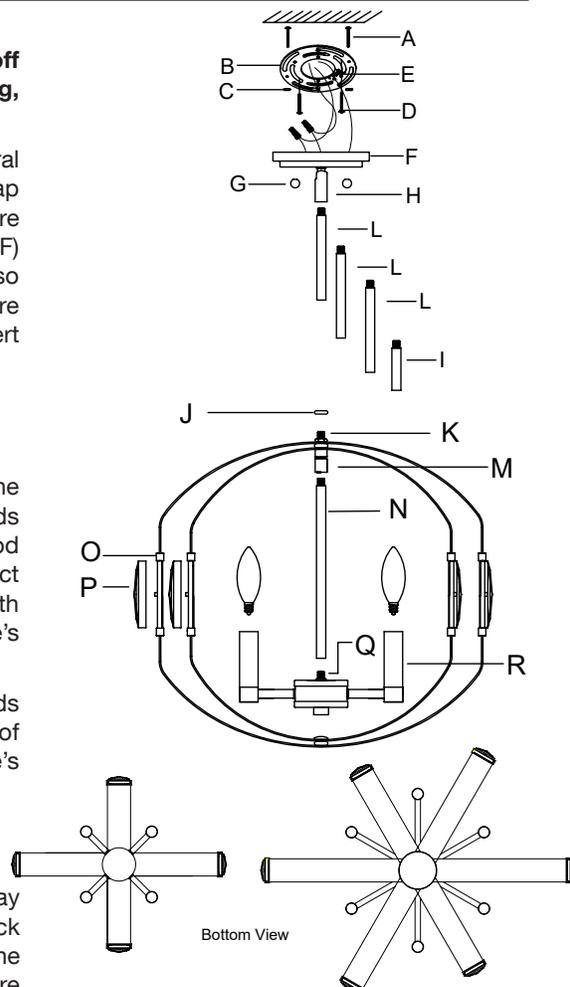

CLEANING TIPS

Treat the fixture gently! Regular cleaning will reduce the need for deep cleaning. For regular cleaning, turn off the light and wipe down the fixture with a clean lint-free cotton or microfiber cloth. Never spray cleaner directly onto the fixture.