

Assembly Instructions: 7116-10 (Mayfair)

IMPORTANT:


- ALL INSTALLATION WORK SHOULD BE DONE BY ACCREDITED PROFESSIONAL.
- SHUT OFF POWER SUPPLY AT FUSE OR CIRCUIT BREAKER!
- USE ONLY THE SPECIFIED BULBS. DO NOT EXCEED THE MAXIMUM WATTAGE!

For Customer Service, please contact the place of purchase.

PREPARING FOR INSTALLATION

Remove all of the contents from the carton. See the important notes above. Shut off the power at the circuit breaker and completely remove the old fixture from the ceiling, including the old mounting strap.

1. From the yellow parts bag remove the mounting strap assembly. One end of nipple (F) should be attached to mounting strap (A) with washer (C) and hex nut (D) in place. Attach mounting strap (A) to the junction box using mounting screws (B) and a screwdriver. Tighten securely.
2. Pass nipple (F) through canopy (G) and thread on deco nut (I) onto the exposed threads of nipple (F) to test the height.

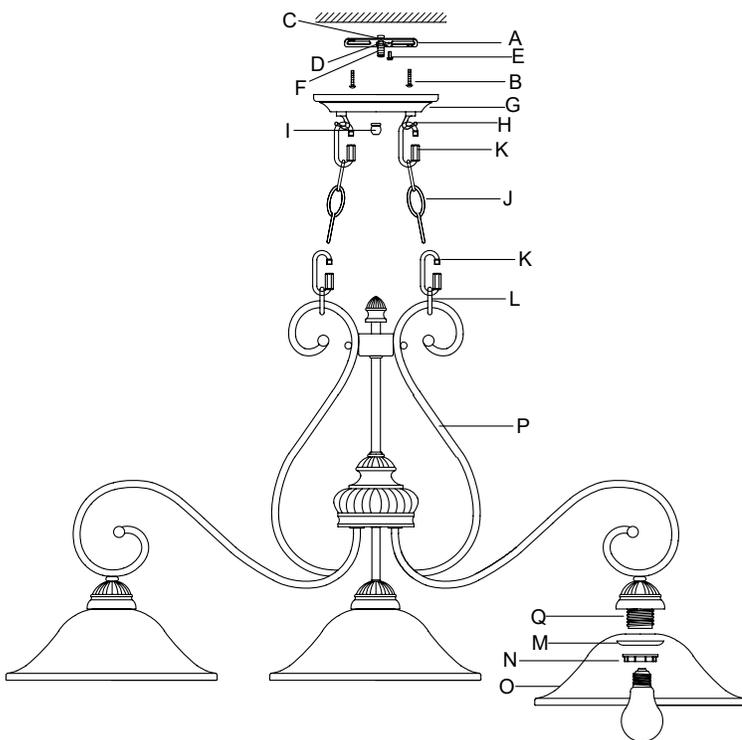

ASSEMBLING THE FIXTURE

3. Carefully place the fixture's frame (P) onto a flat surface. Measure to determine the correct number of chain links (J) needed for proper hanging height. If necessary, use a pair of pliers to open and remove any excess chains (J). Attach chain connectors (K) to each end of chains (J) before attaching one end of the chain connector/chain to top loops (L). Close chain connectors (K). Connect the other chain connectors (K) to canopy loops (H). Feed the fixture's wires up through one of top loops (L) and then through chain (J) (every three links or so). Pull the wires until taut and through the hole of one side of canopy (G).

CONNECTING THE WIRES

4. Have an assistant support the weight of the fixture while completing the wiring. Cut away excess wire. Thread the fixture's wires through canopy loop (H) and nipple (F). Attach the fixture's wires to the power supply wires from the junction box. Connect black to black (or smooth); white to white (or ribbed); ground to ground (green or copper). Twist the ends of the wire pairs together, and then twist on a wire connector. Make sure all twists are in the same direction. If there is no ground wire (green or copper) coming from the junction box, locate ground screw (E) on the mounting strap and wrap the fixture's ground wire around the green ground screw (E). Use a screwdriver to secure ground screw (E) onto the mounting bracket. Tuck all wires neatly into the junction box.

How to Identify the Fixture's Wires			House Wires
Hot	Neutral	Ground	
Smooth	Ribbed	Bare Metal, Green, or Green Inner Thread	Hot
Black	White		Neutral
Black Inner Thread	White Inner Thread		Ground

FINISHING THE INSTALLATION

5. Push canopy (G) up to the ceiling. Tightly screw deco nut (I) onto the threads of nipple (F).
6. Place glass shades (O) over the threads of sockets (Q). Secure glass in place with washers (M) and socket rings (N). Install light bulbs (not provided) in accordance with the fixture's specifications. Do not exceed the maximum recommended wattage.

Your installation is complete. Turn on the power and test the fixture.

CLEANING TIPS

Treat the fixture gently! Regular cleaning will reduce the need for deep cleaning. For regular cleaning, turn off the light and wipe down the fixture with a clean lint-free cotton or microfiber cloth. Never spray cleaner directly onto the fixture.