


Assembly Instructions: 0839-LP

IMPORTANT:

- ALL INSTALLATION WORK SHOULD BE DONE BY ACCREDITED PROFESSIONAL.
- SHUT OFF POWER SUPPLY AT FUSE OR CIRCUIT BREAKER!
- USE ONLY THE SPECIFIED BULBS. DO NOT EXCEED THE MAXIMUM WATTAGE!

For Customer Service, please contact the place of purchase.

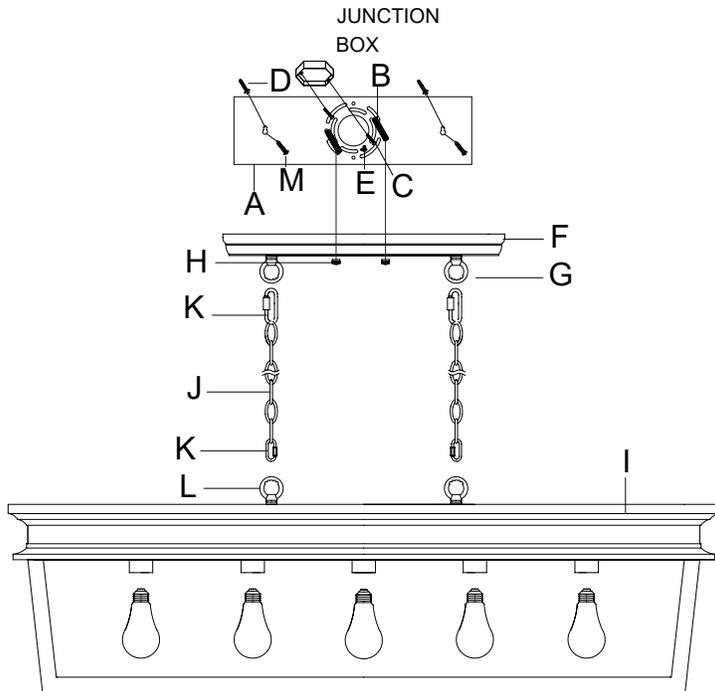

How to Identify the Fixture's Wires		
Hot	Neutral	Ground
Smooth	Ribbed	Bare Metal, Green, or Green Inner Thread
Black	White	
Black Inner Thread	White Inner Thread	

PREPARING FOR INSTALLATION

Remove all of the contents from the carton. See the important notes above. Shut off the power at the circuit breaker and completely remove the old fixture from the ceiling, including the old mounting strap.

1. Take the mounting strap assembly from the parts bag. Mounting strap (A) contains several threaded holes. Two sets of mounting screws (B & C) should be attached to mounting strap (A). Anchors (D) will be attached in the ceiling to secure the mounting strap (A). Align two anchors screws (M) to corresponding holes for the anchors (D) in mounting strap (A) and create small indents to later identify to make holes for the anchors.
2. If mounting screws (B) are not attached, please hold canopy (F) up to mounting strap (A). Line up the holes in canopy (F) with the holes in mounting strap (A) and insert mounting screws (B) into mounting strap (A) so that mounting screws (B) protrude through the holes in canopy (F). Mounting screws (B) are long, so please test canopy (F) against the mounting strap and thread deco nuts (H) onto mounting screws (B) to see if you need to adjust the height of mounting screws (B). Once the mounting screws are in the right place, remove the deco nuts (H) and canopy (F) from the mounting strap and set aside for later.
3. Make a hole for the two anchors using a drill. Next, hammer in the anchors (D) to the holes made until anchors are flush with the drywall surface.
4. Use mounting screws (C) and a screw driver to attach the mounting strap (A) to the junction box.
5. Attach anchor screws (M) into the holes of the mounting strap (A) where anchors (D) rest.
6. Attach one of chain connectors (K) to each end of chains (J). Use one end of the chains with chain connectors to attach the chains to top loops (L) and attach the remaining end of the chains with chain connectors to canopy loops (G). Close the chain connector on both ends to secure. Feed the fixture's wires up through one side of the chain (every three links or so), pulling the wires until taut.

CONNECTING THE WIRES

7. Have an assistant support the weight of the fixture while completing the wiring. Cut away excess wire. Attach the fixture's wires to the house wires which were pulled earlier from the junction box through the mounting strap (B). Connect black to black (or smooth); white to white (or ribbed); ground to ground (green or copper). Twist the ends of the wire pairs together, and then twist on a wire connector. Make sure all twists are in the same direction. If there is no ground wire (green or copper) coming from the junction box, locate ground screw (E) on the mounting strap and wrap the fixture's ground wire around the green ground screw (E). Use a screwdriver to secure ground screw (E) onto the mounting bracket. Tuck all wires neatly into the junction box.

FINISHING THE INSTALLATION

8. Push canopy (G) up to the ceiling and tightly thread nuts (H) onto the ends of mounting screws (B) to secure canopy (F) in place.
9. Attach top loops (L) to the fixture body (I) to secure the fixture body to the chains and canopy.

Install light bulbs (not included) in accordance with the fixture's specifications. Do not exceed maximum recommended wattage.

Your installation is now complete. Turn on the power and test the fixture.

CLEANING TIPS

Treat the fixture gently! Regular cleaning will reduce the need for deep cleaning. For regular cleaning, turn off the light and wipe down the fixture with a clean lint-free cotton or microfiber cloth. Never spray cleaner directly onto the fixture.

