


Assembly Instructions: 0866-LP

IMPORTANT:

- ALL INSTALLATION WORK SHOULD BE DONE BY ACCREDITED PROFESSIONAL.
- SHUT OFF POWER SUPPLY AT FUSE OR CIRCUIT BREAKER!
- USE ONLY THE SPECIFIED BULBS. DO NOT EXCEED THE MAXIMUM WATTAGE!

For Customer Service, please contact the place of purchase.

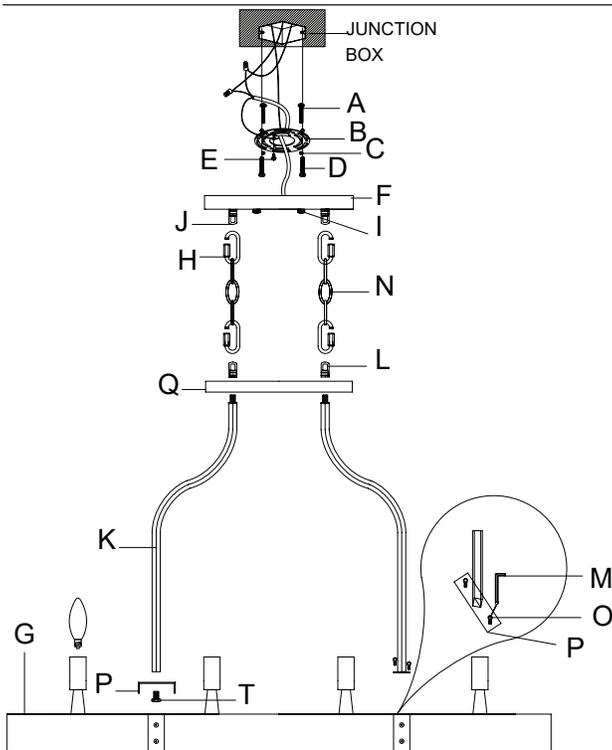

PREPARING FOR INSTALLATION

Carefully remove the new fixture from the carton as well as the yellow bag that holds all of the parts. See the important notes above. Shut off power at the circuit breaker and remove old fixture from wall, including the old mounting strap.

1. From the parts bag remove the mounting strap assembly. Two sets of mounting screws (A & D) should be attached to mounting strap (B). You may need to tighten nuts (C) that hold the screws in place. Place mounting strap (B) over the junction box so that mounting screws (A) are vertical and in alignment with the hole located on the fixture's canopy (F).

2. Secure mounting strap (B) to the junction box with mounting screws (D) and a screwdriver. Tighten the screws securely. Pull house wires through the center of the mounting strap.


ASSEMBLING THE FIXTURE

3. Measure to determine the correct number of chain links needed for proper hanging height. If necessary, use a pair of pliers to open and remove any excess chain. Attach chain connectors (H) to each end of chains (N). Use one of chain connectors (H) to attach chains (N) to top loops (L) and close each chain connector.

4. Feed the fixture's wires up through one side of the chain (every three links or so), pulling the wires until taut. Use the remaining free chains and chain connectors to attach chains to canopy loops (J). Feed the fixture wire through the canopy loops and canopy. Pull the wires until taut. Trim the wires to the desired length plus 8 to 10 inches.

How to Identify the Fixture's Wires

Hot	Neutral	Ground
Smooth	Ribbed	Bare Metal, Green, or Green Inner Thread
Black	White	
Black Inner Thread	White Inner Thread	

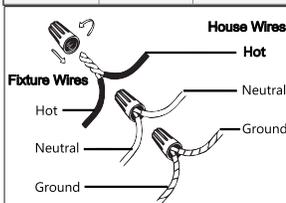

CONNECTING THE WIRES

5. Have an assistant support the fixture weight while completing the wiring. Attach the fixture's wires to the house wires which were pulled earlier from the junction box through the mounting strap (B). Connect black to black (transparent wire with black inner thread or smooth); white to white (transparent wire with white inner thread or ribbed); ground to ground (green wire, transparent wire with green inner thread, or copper). Twist the ends of the wire pairs together, and then twist on a wire connector. Make sure all twists are in the same direction. If there is no ground wire (green or copper) coming from the junction box, locate ground screw (E) on the mounting strap and wrap the fixture's ground wire around the green ground screw (E). Use a screwdriver to secure ground screw (E) onto the mounting bracket. Tuck all wires neatly into the junction box.

FINISHING THE INSTALLATION

6. Push canopy (F) up to the ceiling until mounting screws (A) protrude through the holes in the canopy (F). Use deco nuts (I) to thread onto mounting screws (A) to secure the canopy to the ceiling. Lock screw (T) through flat iron (P) into the bottom of arms (K) and adjust the orientation to fit snugly onto the wood frame (G). Insert arms (K) through the iron box (Q) and thread loops (L) to secure the arms to the iron box (Q). Align arms so that holes in the flat iron (P) attached to the bottom of the arms (K) fit with the holes found on the wood frame (G). Use screws (O) and wrench (M) to secure flat iron (P) onto the wood frame (G).

Install light bulbs (not provided) in accordance with the fixture's specifications. Do not exceed maximum recommended wattage.

Your installation is complete. Turn on the power and test the fixture.

CLEANING TIPS

Treat the fixture gently! Regular cleaning will reduce the need for deep cleaning. For regular cleaning, turn off the light and wipe down the fixture with a clean lint-free cotton or microfiber cloth. Never spray cleaner directly onto the fixture. For deep cleaning, turn off the light and remove the glass prior to cleaning. Hand wash glass with warm water and mild detergent. Dry with a lint-free or microfiber cloth.